

ARZUM

WAFFY

AR 296 WAFFLE MAKİNESİ

AR 296 WAFFLE MAKER

AR 296 WAFFEL MASCHINE

KULLANMA KILAVUZU
INSTRUCTION MANUAL
GEBRAUCHSANWEISUNG

700 W

3

YIL

YEARS

JAHRE

GARANTI


WARRANTY

GARANTIE



Turkey

WAFFY AR 296 WAFFLE MAKER

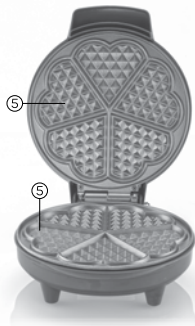

- 1- Handle
- 2- Temperature (ready) indicator light (green)
- 3- Energy (power/warm up) indicator light (red)

- 4- Variable temperature button
- 5- Nonstick waffle plates
- 6- Cord storage and ergonomic legs

Thank you for purchasing **Arzum** brand **Waffle Maker**. We wish this product to make life easier for you, as with other **Arzum** products offered to you.

In order to obtain utmost output from your appliance, please read carefully this user's manual and save it for further use.

IMPORTANT SAFEGUARDS

- Make sure that the voltage indicated on the **Arzum Waffly Waffle Maker** corresponds with the mains voltage in your home. Our company shall not be held liable for any failures owing to any discrepancy and such failures shall not be covered by the guarantee.
- Your device is for household use only. Do not use outdoors for commercial or industrial purposes.
- To prevent harming your appliance do not use extension cords that supply insufficient current.
- Keep the appliance away from and out of the reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision of instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Keep the appliance and its cord out of reach of children less than 8 years.

- Do not place your appliance over or near direct heat sources such as a stove or heating oven.
- Do not let cord hang over edge of a table or counter, or touch any other appliances or hot surfaces.
- Place the unit on a flat and fixed surface, which would be resistant to heat.
- After having used, remove the mains plug from the wall socket and allow it to cool down; move only after it has completely cooled down.
- When not in use and before cleaning, disconnect the mains plug from power outlet.
- **NEVER** immerse the appliance into water for cleaning or any other purposes; do not let any water / water steam leak into the unit.
- Do not touch metal parts when in use.
- Avoid actions that may harm or damage the cord or plug of your device. To unplug the appliance, first hold the plug and **NEVER** pull by the cord.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner, such as by dropping down, etc. Do not attempt to repair it by yourself. Immediately contact an **Arzum Authorized Service**. Be careful in using only the original spare parts in your appliance.
- When cleaning, do not use harmful chemicals, or abrasive cleansers such as metal scourers, or steel wool.
- Use your appliance for its intended purposes as recommended.

USING YOUR APPLIANCE

- Before using for the first time rinse the waffle plates with tepid water and a little dishwashing detergent.
- We recommend you to grease the surfaces slightly, before using for the first time.
- Connect the mains plug to the power outlet. You may notice a slight smoke or odor. This is normal and will not recur after a while.

Note: Ensure that the cord is kept well from the cooking plates when in use.



Use as a Waffle Maker

- Plug your appliance to the socket, set the variable temperature button to a proper position for cooking settings indicated on your appliance, and preheat the unit.
- The appliance will be ready when the pilot light (temperature light / green light) goes on.
- Gently open the cover and disconnect the plug from the wall outlet and allow cooling.



WAFFLE RECIPE

Ingredients

- 2 eggs
- 1 tablespoon granulated sugar
- 1/4 glass oil
- 1 teaspoon salt
- 2 glasses flour
- 1,5 glass milk
- 1 packet baking powder
- 1 packet vanillin

Directions:

- Whisk egg and sugar properly until it becomes foam.
- Continue to whisk by adding milk, oil and salt. While this process is continuing, add flour gradually and make it a smooth consistency.
- Whisk together for a last time by adding baking powder and vanillin into the dough as well.
- Pour waffle dough, which you have prepared, into preheated waffle plates of **Arzum Waffly** through a spoon.
- Waffle will be ready within 4-6 minutes averagely.



WARNING:

NEVER touch the outer surfaces of the unit as they heat up during operation. Use the handle to open the upper cover. Vapor may come out from between the cooking plates of your appliance when the upper body is opened or during the cooking. Pay attention when taking out the foods.



CLEANING & CARE

- Before cleaning and care, unplug the appliance from the wall socket and allow it to cool down.
- After each use, wipe cooking plates to protect the cooking surfaces coated with the non-stick material.
- Rinse the cooking plates with warm water and soap, using a soft cloth or plastic brush.
- Do not use abrasive materials such as metal brush or steel wool as this will scratch the non-stick coating.
- You can wipe the plastic compounds and outer metal parts with a soaped cloth, and then dry it completely.
- You can store your appliance with using cord storage.
- **NEVER** immerse into water, except for the cooking plates.



Product life 7 years
TECHNICAL SPECIFICATIONS
220-240 V ~ 50/60 Hz
700 W

The product is in compliance with the EEE Directives.

WEEE

This product contains recyclable materials that compliance with the WEEE directives. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.



CE

Manufacturer / Importer:

Arzum Elektrikli Ev Aletleri San. ve Tic. A.Ş.
Otağçılar Caddesi No: 78 Kat: 1 B Blok No: B1b
Eyüp 34050 İstanbul Türkiye

Made in China

Tel: +90 212 467 80 80 Fax: +90 212 467 80 00

www.arzum.com

GARANTİ ŞARTLARI

1. Garanti süresi, malın teslim tarihinden itibaren başlar ve 3 yıldır.
2. Malın bütün parçaları dahil olmak üzere tamamı garanti kapsamındadır.
3. Malın ayıplı olduğunun anlaşılması durumunda tüketici, 6502 sayılı Tüketicinin Korunması Hakkında Kanununun 11 inci maddesinde yer alan;

a- Sözleşmeden dönme,

b- Satış bedelinden indirim isteme,

c- Ücretsiz onarılmasını isteme,

ç- Satılının ayıpsız bir misli ile değiştirilmesini isteme, haklarından birini kullanabilir.

4. Tüketicinin bu haklardan ücretsiz onarım hakkını seçmesi durumunda satıcı; işçilik masrafı, değiştirilen parça bedeli ya da başka herhangi bir ad altında hiçbir ücret talep etmeksizin malın onarımını yapmak veya yaptırmakla yükümlüdür. Tüketici ücretsiz onarım hakkını üretici veya ithalatçıya karşı kullanabilir. Satıcı, üretici ve ithalatçı tüketicinin bu hakkını kullanmasından müteselsilen sorumludur.

5. Tüketicinin, ücretsiz onarım hakkını kullanması halinde malın;

- Garanti süresi içinde tekrar arızalanması,

- Tamiri için gereken azami sürenin aşılması,

- Tamirinin mümkün olmadığı, yetkili servis istasyonu, satıcı, üretici veya ithalatçı tarafından bir raporla belirlenmesi durumlarında;

tüketici malın bedel iadesini, ayıp oranında bedel indirimi veya imkan varsa malın ayıpsız misli ile değiştirilmesini satıcıdan talep edebilir. Satıcı, tüketicinin talebini reddedemez. Bu talebin yerine getirilmemesi durumunda satıcı, üretici ve ithalatçı müteselsilen sorumludur.

6. Malın tamir süresi 20 iş gününü, binek otomobil ve kamyonetler için ise **30 iş gününü** geçemez. Bu süre, garanti süresi içerisinde mala ilişkin arızanın yetkili servis istasyonuna veya satıcıya bildiri tarihinde, garanti süresi dışında ise malın yetkili servis istasyonuna teslim tarihinden itibaren başlar. Malın arızasının **10 iş günü** içerisinde giderilememesi halinde üretici veya ithalatçı, malın tamiri tamamlanıncaya kadar, benzer özelliklere sahip başka bir malı tüketicinin kullanımına tahsis etmek zorundadır. Malın garanti süresi içerisinde arızalanması durumunda, tamirde geçen süre garanti süresine eklenir.

7. Malın kullanma kılavuzunda yer alan hususlara aykırı kullanımında kaynaklanan arızalar garanti kapsamı dışındadır.

8. Tüketici, garantiden doğan haklarının kullanılmasına ile ilgili olarak çıkabilecek uyuşmazlıklarda yerleşim yerinin bulunduğu veya tüketici işleminin yapıldığı yerdeki Tüketici Hakem Heyetine veya Tüketici Mahkemesine başvurabilir.

9. Satıcı tarafından bu Garanti Belgesinin verilmesi durumunda, tüketici Gümrük ve Ticaret Bakanlığı Tüketicinin Korunması ve Piyasa Gözetimi Genel Müdürlüğüne başvurabilir.

ARZUM

WAFFY

AR 296 WAFFLE MAKİNESİ

GARANTİ BELGESİ

BELGE NO: 0056

BELGE TARİHİ: 10/08/2015

İTHALATÇI FIRMA

UNVAN : ARZUM ELEKTRİKLİ EV ALETLERİ SAN. VE TIC. A.Ş.

ADRES : OTAKÇILAR CADDESİ NO: 78 KAT: 1 B BLOK NO: B1b
34050 EYÜP-İSTANBUL

TEL : (0212) 467 80 80 FAKS: (0212) 467 80 00

E-POSTA :

FİRMA YETKİLİ İMZASI:

ARZUM ELEKTRİKLİ
EV ALETLERİ SAN. VE TIC. A.Ş.

ÜRÜNÜN CİNSİ : WAFFLE MAKİNESİ

MARKASI : ARZUM

MODELİ : WAFFY

TYPE NO : AR 296

BANDROL VE SERİ NO :

TESLİM TARİHİ VE YERİ :

GARANTİ SÜRESİ : 3 YIL

AZAMI TAMİR SÜRESİ : 20 İŞ GÜNÜ

SATICI FIRMA

UNVAN :

ADRES :

TEL - FAKS :

E-POSTA :

FATURA TARİH VE NO :

TESLİM TARİHİ VE YERİ :

TARİH, İMZA VE KAŞE :

Bu belgenin kullanılması 6502 sayılı Tüketicinin Korunması Hakkında Kanun ve bu kanuna dayanılarak yürürlüğe konulan Garanti Belgesi Uygulama Esaslarına Dair Tebliğ uyarınca Arzum Elektrikli Ev Aletleri San.ve Tic. A.Ş. tarafından hazırlanmıştır.

ARZUM

ARZUM DANIŐMA MERKEZİ

444 1 800

www.arzum.com

AR296-301115

GENEL DAĐITICI
ARZUM ELEKTRİKLİ EV ALETLERİ SAN. VE TİC. A.Ő.
Otakçılar Caddesi No: 78 Kat: 1 B Blok No: B1b
Eyüp 34050 İstanbul Türkiye
Tel: (0212) 467 80 80 Faks: (0212) 467 80 00

CE